


ACCESS POINT EXTENSION INSTRUCTIONS

The access point extension provides a watertight connection between Ethernet cords when two cords are required to reach the TP-Link on tow-between air carts. To use the extension, follow the steps below.

1. Disassemble the connector as shown below by unscrewing the connector halves, the caps, and pushing out the blue grommets.

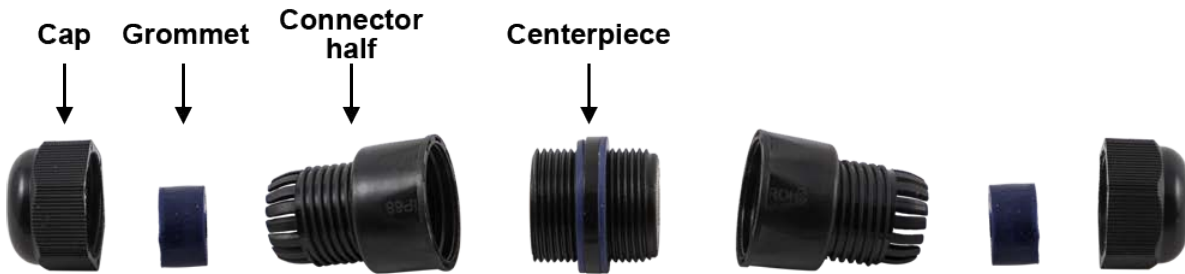

2. Thread a cap, grommet, and connector half through one of the Ethernet cables supplied with the Access Point Extension Kit (you won't use the Ethernet cable supplied in the WBFM tractor kit).



3. Insert the grommet back into the connector half.



TIP: Twist the cap one or two threads onto the connector half so that it stays in place but doesn't restrict movement of the assembly.

4. Plug the Ethernet cable into the centerpiece.




5. Twist the connector half all the way onto the centerpiece. Then, tighten the cap until tight.



6. Repeat steps 2-6 on the other Ethernet cable.



7. Plug the other end of the 35 ft cable into the LAN0 port of the TP-Link.
8. Plug the other end of the 15 ft cable into the POE port of the power supply.

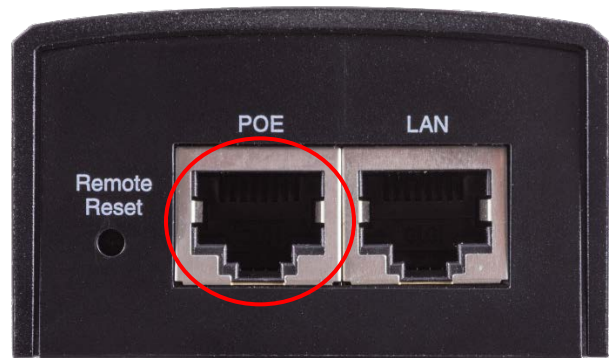

9. Complete the rest of the steps in the “Installing the access point” section of the Wireless Blockage and Flow Monitor Installation Guide (600840-000019).